




INSTRUKCJA OBSŁUGI RADIO MOTOCYKLOWE MP3 BLUETOOTH Z GŁOŚNIKAMI **LXBX016**


PANEL STEROWANIA

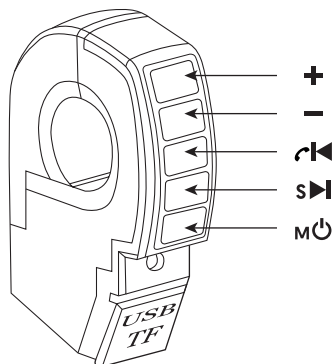


- +** Naciśnięcie przycisku zwiększa głośność utworu.
Przytrzymanie przycisku powoduje stopniowe zwiększanie głośności.
- Naciśnięcie przycisku zmniejsza głośność utworu.
Przytrzymanie przycisku powoduje stopniowe zmniejszanie głośności.
- ◀** W trybie Bluetooth, naciśnięcie przycisku przenosi do poprzedniego utworu. Podczas przychodzącego połączenia telefonicznego naciśnięcie przycisku pozwala odebrać połączenie. Aby przełączyć aktywne połączenie na odbiór z telefonu, należy nacisnąć ponownie przycisk.
W trybie radio, naciśnięcie przycisku wybiera poprzednią stację radiową z zapisanych stacji. Przytrzymanie przycisku przez co najmniej 2 sekundy powoduje automatyczne wyszukanie poprzedniej stacji radiowej.
W trybie USB/TF, naciśnięcie przycisku przenosi do poprzedniego utworu.
- ▶** W trybie Bluetooth, naciśnięcie przycisku przenosi do następnego utworu. Podczas przychodzącego połączenia telefonicznego naciśnięcie przycisku pozwala odrzucić połączenie. W trakcie trwania połączenia telefonicznego, naciśnięcie przycisku pozwala zakończyć połączenie.
W trybie radio, naciśnięcie przycisku wybiera następną stację radiową z zapisanych stacji. Przytrzymanie przycisku przez co najmniej 2 sekundy powoduje automatyczne wyszukanie następnej stacji radiowej.
W trybie USB/TF, naciśnięcie przycisku przenosi do następnego utworu.
- M** Naciśnięcie przycisku pozwala uruchomić urządzenie. Po uruchomieniu urządzenia naciśnięcie przycisku pozwala przełączyć na jeden z trzech dostępnych trybów odtwarzania: Bluetooth, radio lub USB/TF (karta pamięci). Aby wyłączyć urządzenie, należy przytrzymać przycisk przez co najmniej 3 sekundy.

MONTOWANIE URZĄDZENIA

1.

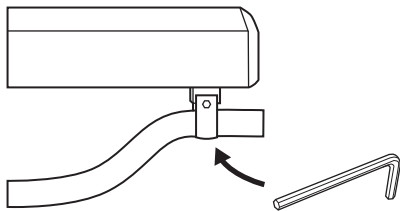

2.

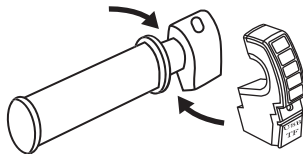

1. Głośnik należy przymocować do kierownicy motocykla przy użyciu uchwytów zaciskowych. Śruby uchwytów zaciskowych, należy dokręcić kluczem ampulowym, tak aby zamocowany głośnik stał stabilnie.
2. Panel sterowania należy przymocować w pobliżu rączki kierownika, aby mieć łatwy i wygodny dostęp do przycisków funkcyjnych urządzenia.
3. Wszystkie przewody należy podłączyć do instalacji elektrycznej pojazdu.

SPECYFIKACJA URZĄDZENIA

Moc: 2 x 6 W

Radio FM: Tak

Pamięć FM: 18 stacji

USB: Tak

TF: Tak

AUX in: Tak

Wodoszczelność: Tak




Wyprodukowano w ChRL dla Lamex
Lipówki, ul. Radosna 10
08-440 Piława

Pierwiastki oraz związki chemiczne zawarte w urządzeniu mogą mieć negatywny wpływ na środowisko naturalne i zdrowie ludzkie. Zużyty sprzęt elektryczny oraz elektroniczny oznaczony symbolem przekreślonego kosza nie może być umieszczany w pojemnikach na odpady komunalne. Taki sprzęt podlega zbiórce i recyklingowi. Obowiązki wynikające z ustawy o zużytym sprzęcie elektrycznym i elektronicznym w imieniu przedsiębiorcy, zgodnie z odpowiednią umową, przejęła Organizacja Odzysku.



USER MANUAL
MP3 BLUETOOTH MOTORBIKE RADIO
WITH SPEAKERS
LXBX016

CONTROL PANEL

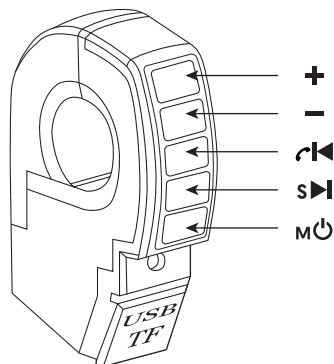

+ Pressing the button increases the volume of the song.
Holding down the button gradually increases the volume.

- Pressing the button decreases the volume of the song.
Holding down the button gradually decreases the volume.


◀ In Bluetooth mode, pressing the button moves to the previous song. During an incoming phone call, pressing the button allows you to answer the call. To switch the active call to receive from the phone, press the button again.
In radio mode, pressing the button selects the previous radio station from the stored stations. Holding the button down for at least 2 seconds automatically searches for the previous radio station.
In USB/TF mode, pressing the button moves to the previous track.

▶ In Bluetooth mode, pressing the button moves to the next track. During an incoming phone call, pressing the button allows you to reject the call. During a phone call, pressing the button allows you to end the call.
In radio mode, pressing the button selects the next radio station from the stored stations. Holding the button down for at least 2 seconds automatically searches for the next radio station.
In USB/TF mode, pressing the button takes you to the next track.


M Pressing the button starts the device. Once the device has started up, pressing the button switches to one of the three available playback modes: Bluetooth, radio or USB/TF (memory card). To switch off the device, press and hold the button for at least 3 seconds.

ASSEMBLING THE DEVICE

1.

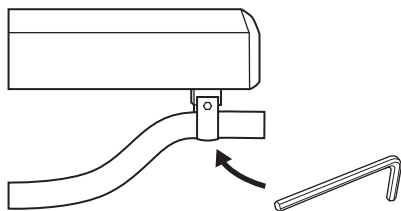

2.

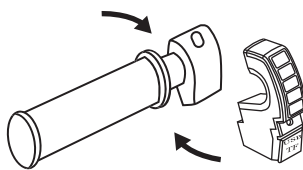

1. The loudspeaker should be fixed to the handlebars of the motorbike using the clamping brackets. Tighten the screws of the clamping brackets, using an ampoule spanner, so that the mounted speaker stands firmly.
2. The control panel should be fixed near the handlebar for easy and convenient access to the function buttons of the unit.
3. All wiring should be connected to the vehicle's electrical system.

DEVICE SPECIFICATION

Power: 2 x 6 W

FM radio: Yes

FM memory: 18 stations

USB: Yes

TF: Yes

AUX in: Yes

Waterproof: Yes



Made in P.R.C. for Lamex
Lipówki, ul. Radosna 10
08-440 Piława

The elements and chemical compounds contained in the equipment may have a negative impact on the environment and human health. Waste electrical and electronic equipment marked with the crossed-out wheeled bin symbol must not be placed in municipal waste bins. Such equipment is subject to collection and recycling. Responsibilities under the Waste Electrical and Electronic Equipment Act are taken over by the Recovery Organisation on behalf of the entrepreneur, according to the relevant agreement.